


COXUSA

INSTALLATION INSTRUCTIONS/SERIES 12

BY-PASSING DOOR HARDWARE
FOR 3/4" TO 1-3/8" DOORS

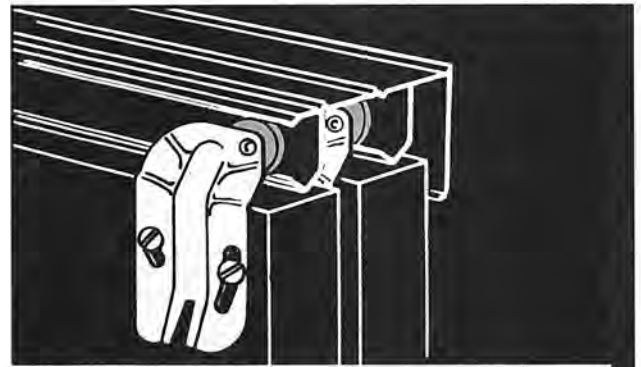


INSTALL TRACK 1

Fasten track to header with No. 8" x 5/8" pan head screw. For 3/4" doors butt track to fascia. For 1 3/8" doors, install 1" back from fascia (see details below).

TRIM DOORS 2

Measure dimensions in opening (distance from finish floor to header). Subtract 1 3/4" from finished opening height and trim doors to this length. This will allow a maximum clearance of 1/2" between bottom of doors and finish floor. If a lesser clearance is preferred, doors can be lowered when final adjustment is made (see No. 5).

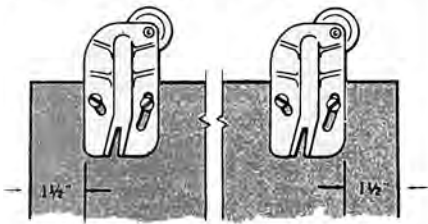

ATTACH HANGERS 3

FOR 3/4" DOORS


Front Door — use Hanger No. 12-006
Back Door — use Hanger No. 12-004

FOR 1 3/8" DOORS

Front Door — use Hanger No. 12-004
Back Door — use Hanger No. 12-006

Refer to the above details to determine hanger placement for door thickness.


With hanger against top edge of door, fasten with No. 8 x 5/8" pan head screw, 1 1/2" in from edge as shown. To obtain maximum adjustment, screws must be located at top of slots as marked on hanger.

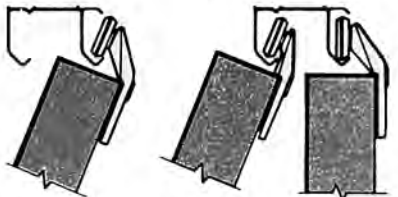


REAR DOOR FRONT DOOR REAR DOOR

INSTALL DOORS 4


Install rear door first. Standing in front of the opening tilt bottom of door out and lift into track. Follow same procedure for front door.

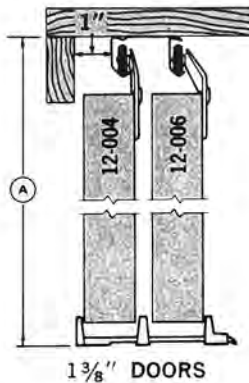

1 3/8" DOORS

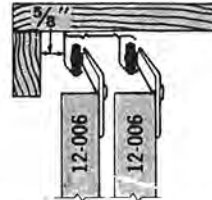

1" — 1 1/8" DOORS

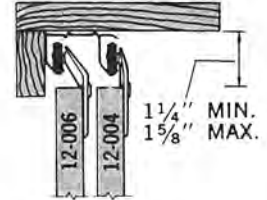

3/4" DOORS

NON-FASCIA TRACK

No. 12-100—Steel or NO. 12-200—Aluminum

NOTE: Numbers shown on doors refer to hanger numbers. See face of hanger for identification.




INSTALL FLOOR GUIDE 5

(No. 04-020)

Slide both doors to the same side of the opening. Assemble center guide on long part of guide and place in position as shown. Plumb face of front door in opening. Push doors back from front guide to expose screw hole under front door. Fasten guide to floor with No. 8 x 5/8" screw.


Slip rear guide over loose end of long guide and locate open end slot over appropriate screw hole for door thickness. Fasten to floor with No. 8 x 5/8" screw.

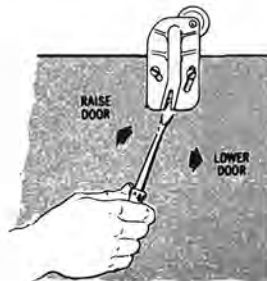

ADJUST DOORS 6


Close wardrobe doors. If gap exists at top, adjust hanger next to jamb. If gap is at bottom, adjust hanger farthest from jamb. Align door edges parallel with jambs by: backing-off both hanger screws 1/4 turn—insert screwdriver in hanger slot as shown—lower or raise door until edge is parallel with jamb—tighten screws. Follow same procedure with other door.

NO. 12-300 NON-FASCIA STEEL TRACK

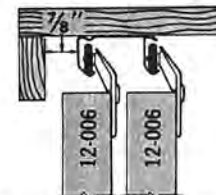

For 1 3/8" DOORS ONLY

ALUMINUM FASCIA TRACK — 1 3/8" Doors Only

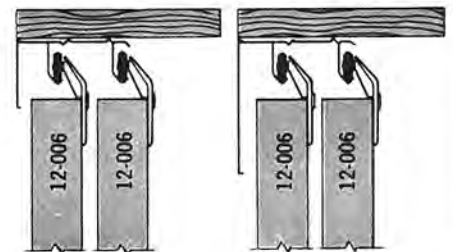

No. 12-400
1 3/4" Fascia

No. 12-600
3" Fascia

MAXIMUM RECOMMENDED DOOR WEIGHTS:

Single wheel
Hanger
50 Lbs.

Double wheel
Hanger
75 Lbs.

INSTALL ANGLE STOP

